

RESET DEVICE

To reset a camera we need to be sure that we can reach the reset button. Please follow these steps to get it done.

1. Open the case if necessary.
2. Hold the reset button for 30 seconds. (see picture)
3. Confirm the led indicator is now flashing rapidly.

If the led indicator is flashing rapidly the reset has succeeded.


If the led indicator is not flashing rapidly follow the steps bellow.

1. Open the case if necessary.
2. Hold the reset button for 30 seconds. (see picture)
3. Confirm the led indicator is now flashing rapidly.


If the led indicator is flashing rapidly the reset has succeeded.

If the led indicator is still not flashing rapidly contact the programmer to reset the camera with the code inside the camera (see picture).



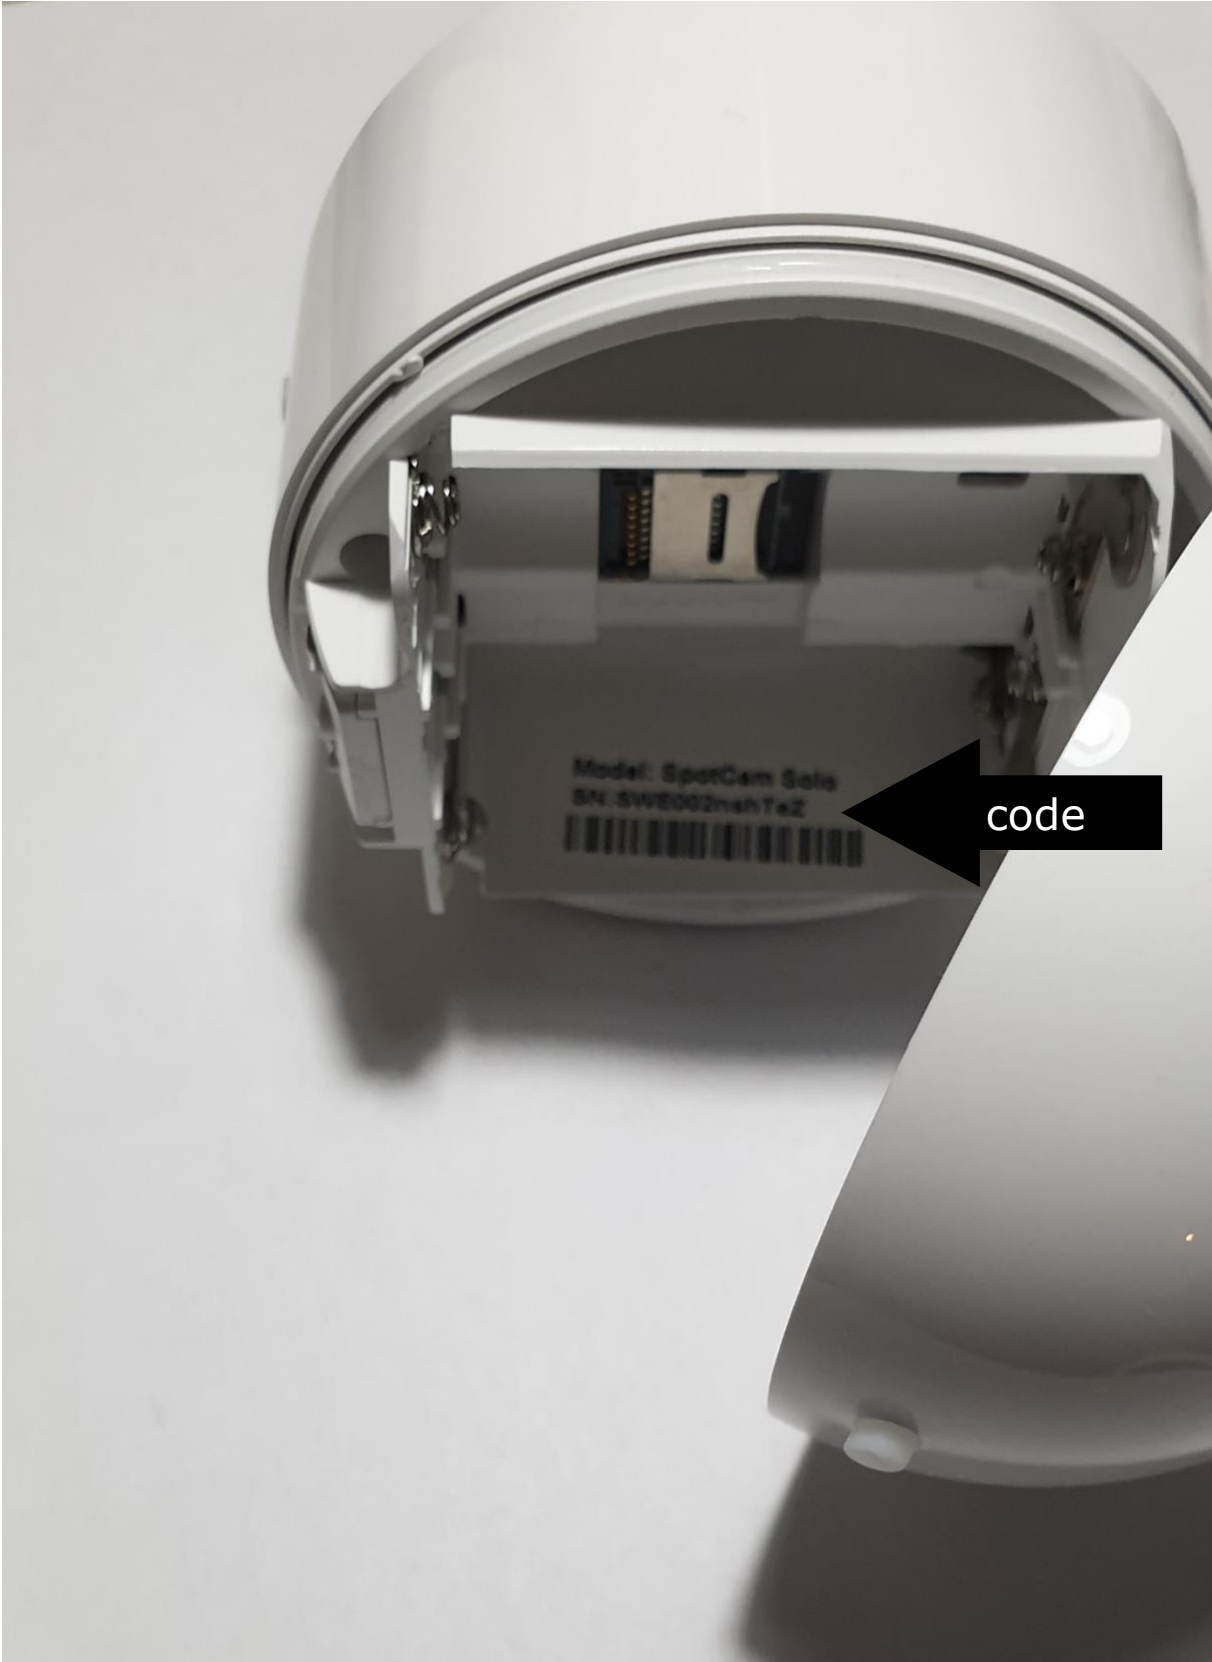

Model: SpotCam Solo
SN: SWE002nshTzZ

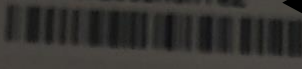

code