

## **RESET DEVICE**

To reset a door window sensor we need to be sure that we can reach the reset button. Please follow these steps to get it done.

1. Open the case if necessary.
2. Hold the reset button for 5 seconds. (see picture)
3. Confirm the led indicator is now flashing rapidly.

If the led indicator is flashing rapidly the reset has succeeded.

If the led indicator is not flashing rapidly follow the steps bellow.

1. Open the case if necessary.
2. Hold the reset button for 5 seconds. (see picture)
3. Confirm the led indicator is now flashing rapidly.

If the led indicator is flashing rapidly the reset has succeeded.

If the led indicator is still not flashing rapidly repeat the steps above until the led indicator is flashing rapidly.



Reset